Trolley Assembly

Top Handle

Use the large Allen key to fit the bottom handle to the wheel set with the large screws & washers.

Screw the knob onto the thread.

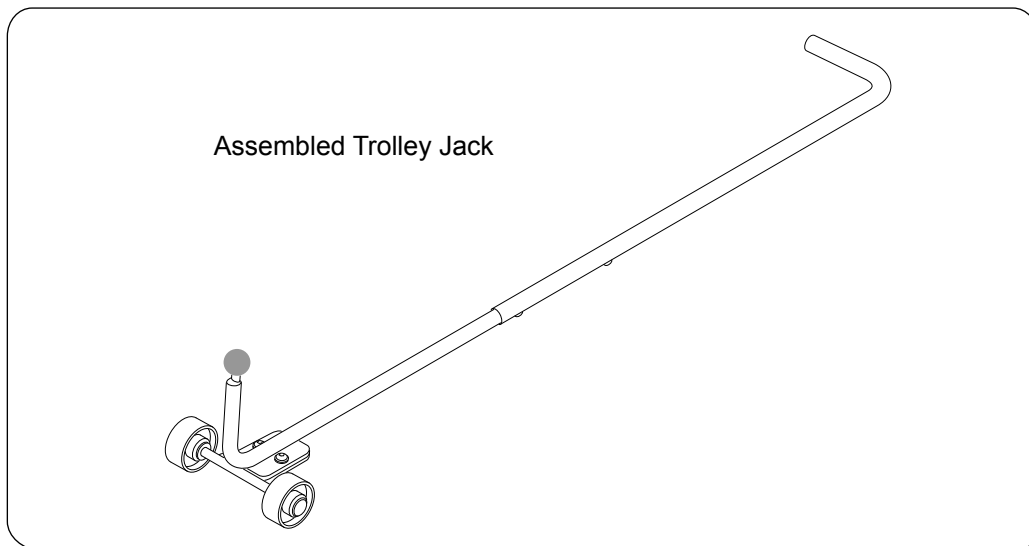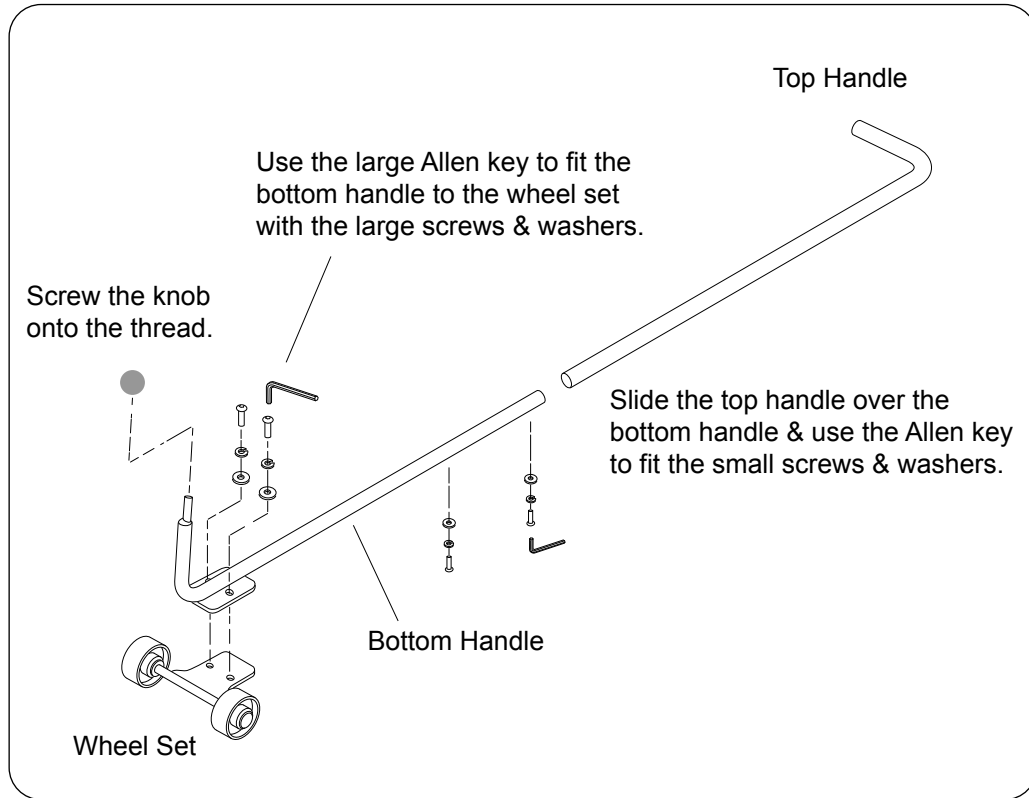Slide the top handle over the bottom handle & use the Allen key to fit the small screws & washers.

Bottom Handle

Wheel Set

Assembled Trolley Jack

Trolley Assembly (Sightmaster II)

Unscrew the knob.

Knob

Place the adaptor over the thread.

Replace the knob.