


## How to measure **WALL** fixing blinds

1. Measure the exact size you would like the blind to overlap the wall
2. Allow an additional 40mm on the width for fixing

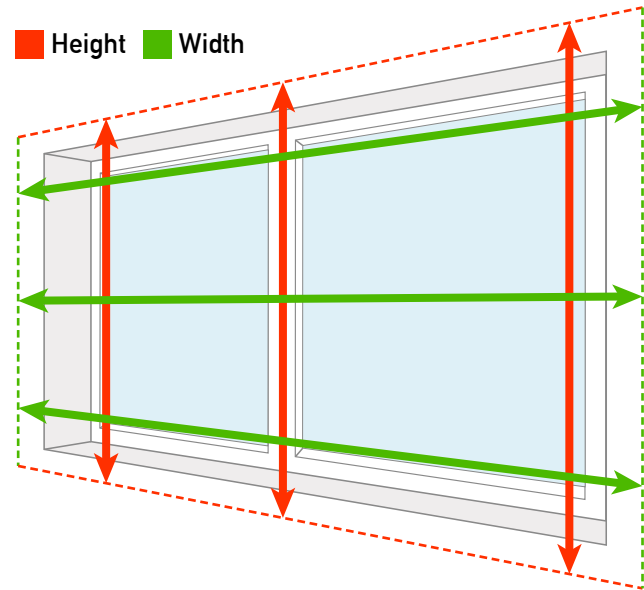

## How to measure **INSIDE RECESS** fixing blinds

1. Measure the full width and height of the window recess
2. Subtract 40mm from the width to allow for fixings

