




1. Measure the exact size you would like the blind to overlap the wall
2. Allow an additional 40mm on the width for fixing

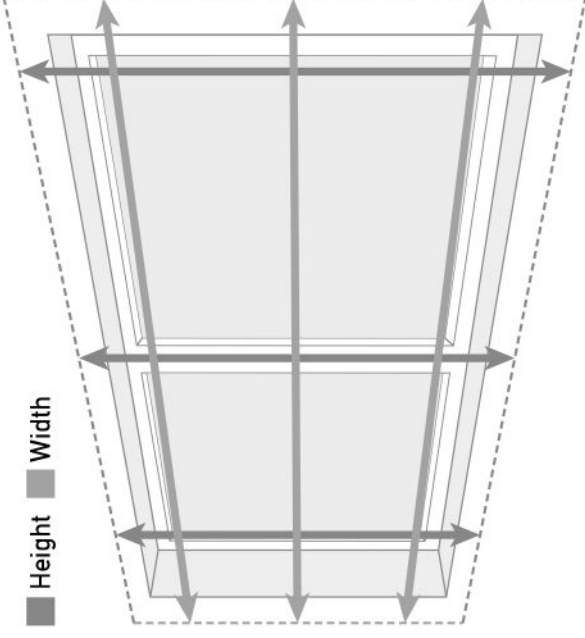

1. Measure the full width and height of the window recess
2. Subtract 40mm from the width to allow for fixings

